# Quick answer: How to turn on section box in revit?

#### **Description**

To display the **section** box, in the Properties palette for a 3D view, select Section **Box**. When a **section box** is first displayed, the extents of the visible geometry are used to define the extents of the section box. Select the section **box** and use the grip controls to resize the extents.

Moreover, how do I show a section box in Revit?

You asked, how do you turn on sections in Revit? To open the **section** view, double-click the section header, or select the section view from the Sections grouping of the Project Browser. The section view changes when the design changes or the **section** line is moved.

People ask also, why is Section box not showing in **Revit**? Go to a 3D view. In the view properties tick the **box** for "**Section** box†This should reveal and activate the section box in the 3D view, if you can't see it you may need to reveal hidden elements and unhide it.

Furthermore, how do I **turn** off a section **box** in Revit? Click View tab Graphics panel (Visibility/Graphics). In the Visibility/Graphics dialog, click the Annotation Categories tab. Clear the check box for Section Boxes, and click OK to hide the section **box** extents in the view. To display the **section** box, in the Properties palette for a 3D view, select Section Box. When a section box is first displayed, the extents of the visible geometry are used to define the extents of the section box. Select the **section** box and use the grip controls to resize the extents.

## How do I make my scope box visible?

- 1. Open a view in which you can see the scope box.
- 2. Select the scope box.
- 3. On the Properties palette, for the Views Visible property, click Edit.
- 4. Locate the appropriate view row (for example, South Elevation), and find its value in the Override column.
- 5. Click OK.

### How do I use a scope box in Revit?

- 1. In a plan view, click View tab Create panel (Scope Box).
- 2. On the Options Bar, enter a name and specify a height for the scope box, if desired.
- 3. To draw a scope box, click in the upper left-hand corner to start the box.

## How do you annotate sections in Revit?

## How do you unhide a section in Revit?

Select the element. Do one of the following: Click Modify | tab Reveal Hidden Elements panel (Unhide Element) or (Unhide Category). Right-click the element, and click Unhide in View Elements or Category.

#### How do I unhide a workset in Revit?

- 1. Click Collaborate tab Worksets panel (Worksets).
- 2. Under Visible in all views, select the check box to show a workset in project views, or clear the check box to hide it.

## Why is scope box greyed out Revit?

There are some situations where the Scope Box property of a view is greyed out – so you cannot assign a Scope Box to the view. The answer may be to do with the Crop Boundary – and it may not be obvious, especially if the crop boundary is hidden.

## How do you edit a section box in Revit?

In Revit®, the â€~Section Box' command is used to clip the viewable portion of a 3D view. You can activate it simply by checking the Section Box entry in Properties – Extents. After enabling the section box, you can modify its extents using â€~drag' controls in the 3D view.

### What is a scope box?

Scope boxes are used to control the extents of elements like grids, levels and reference planes. Each of these elements can be assigned to a specific scope box, limiting the 3D extents to the dashed green line limit. In the example below we assign all the grids to a scope box.

### How do you rotate a scope box in Revit?

- 1. Open the project view that contains the section (callout) or scope box to rotate.
- 2. Select the section (callout) or scope box.
- 3. Click Modify tab Modify panel (Rotate).
- 4. Rotate the view.

### How do you annotate sections?

## How do you Create a section head in Revit?

- 1. Click File tab New Annotation Symbol.
- 2. In the Open dialog, select Section Head.
- 3. The section head template includes a predefined head.
- 4. If desired, add text to the symbol by clicking Text panel (Text).

## How do you split a section in Revit?

- 1. create a normal section line as usual.
- 2. Select the section line.
- 3. In the ribbon bar under the modify tab click "Split Segmentâ€
- 4. Click on the section line where you want to create the split.
- 5. You can now adjust the location on the new segment.

## How do I unhide a view?

On the View Control Bar, click (Reveal Hidden Elements). The Reveal Hidden Elements icon displays with a color border to indicate that you are in Reveal Hidden Element mode.

## How do you show hidden lines in Revit?

On the View tab, select Show Hidden Lines. Next, select the element in front, and then select the element behind to show its hidden lines. Select each obscuring element individually to show hidden lines. Use the Remove Hidden Lines tool to reset the elements.

### Why are my doors not showing up in Revit?

Open the Family and go to Plan View and then check the Visibility Settings for each of the Elements in the View. An Unexpected Error has occurred. One possibility is that your door is lower than the cutting plane so that the lines do not appear. Go to edit the family, select the lines and change the visibility setting.

## How do you turn off a workset in Revit?

Go to Solution. Insert menu > Manage Links > Revit tab: select the Link and click Manage Worksets button bottom right. Turn off what you don;t need.

## How do I manage a workset in Revit?

To control the worksets in the linked project, select the linked file and then click Manage Worksets. Revit displays the Manage Worksets for Link dialog. Here, you can select one or more linked worksets and change their Opened status. This is the same dialog that would have been displayed if you had selected Specifyâ€!

#### How do I see different worksets in Revit?

Open the view. Click View tab Graphics panel (Visibility/Graphics). Shows or hides the workset depending on the value of the Visible in All Views column of the Worksets dialog, which is displayed in parentheses. Displays the workset in the view, regardless of its global setting.

## How do you remove a scope box?

Just Click Delete Unused to delete all unused Scope Boxes – those which are not used by any views, levels, grids, or reference planes. If you would like to select exactly which Scope Boxes to delete instead of all unused you may also check the box before each Scope Box and use the Delete Checked button.

## How do you crop a floor plan view in Revit?